


Standard Additional Hardware




Battery Wand 18-Volt
(12 batteries included)
PCN 2920499000

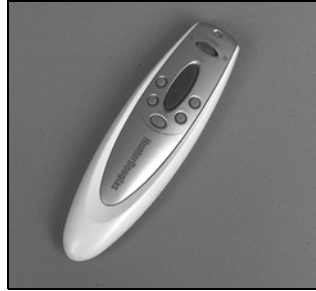


IR/RF Platinum Remote Control
Kit
PCN 2984495000



AA Batteries (4 Per Pack)
PCN 2981154000

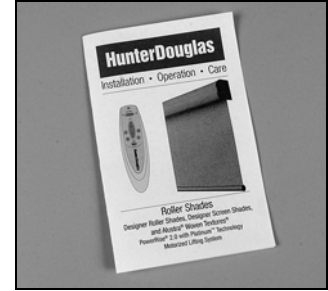


Roller PowerRise 2.0 with
Platinum Technology Installation
Instructions
LIT888265 English
LIT888265F French

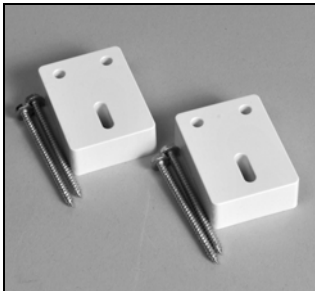


Spacer Block Kit
KIT6102 5/8" w/screws (2 pack)
KIT6103 3/8" w/screws (3 pack)


NOTE: Included with OB
cassette shades, optional with
IB cassette shades.

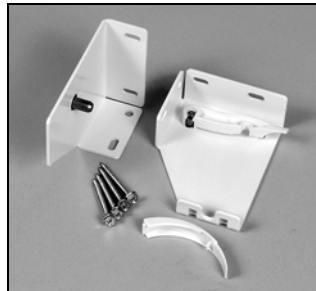

Standard PowerRise Mounting
Brackets (Includes Screws &
Port Cover)
PCN KIT6104A Aspen White

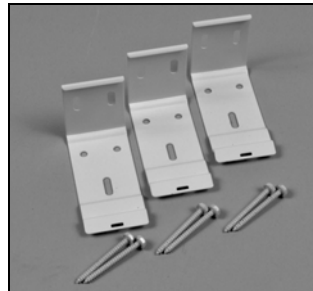

Large Cassette Brackets
2 Pack (Not Shown)
PCN RC412048 Black
PCN RC412977 Gray
PCN RC412874 White
3 Pack (Shown)
PCN RC492048 Black
PCN RC492977 Gray
PCN RC492874 White

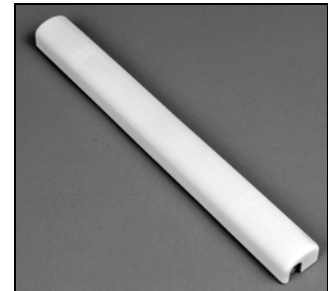

18 Volt Satellite Battery Pack
PCN KIT2520

NOTE: Included with Standard
Bracket shades, optional for
cassette shades. (Includes 15"
(PCN 2989899000) wire unless
another length is specified)