

Nantucket™ EasyRise™ Tilt Only Additional Hardware



Installation Bracket Screws
PCN 2980153000



Lever Installation Brackets
2 Pack PCN Kit 9109



Lever Installation Brackets
3 Pack PCN Kit 9110




Magnetic Hold-Down Bracket
Kit PCN 9111



Kit UCT Install, Inside-Outside
Bracket (Required for shade
Operation)
PCN KIT2350




Silhouette® Nantucket™
Window Shades EasyRise™
Lifting Systems IOC
PCN 5107236000

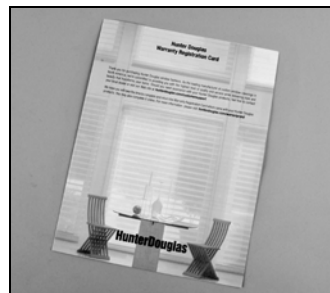


Hunter Douglas Warranty
Registration Card
PCN 7109933000


Optional Hardware

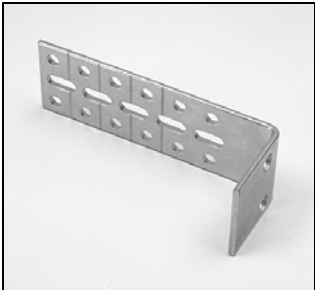

Extension Bracket
PCN 2930340000

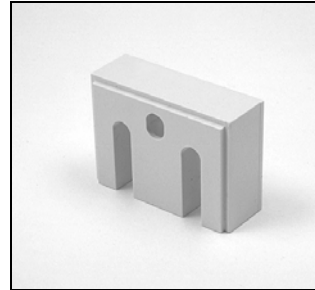


1/2" Spacer Block
PCN 2930230000

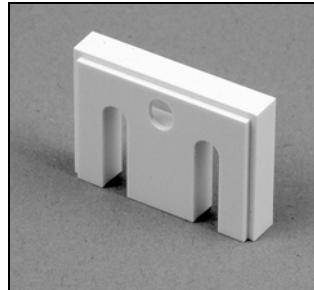

1/4" Spacer Block
PCN 4150239000



Silhouette® Nantucket® Dust
Cover Installation Kit
Loops PCN 4150077000
Hooks PCN 4150078000

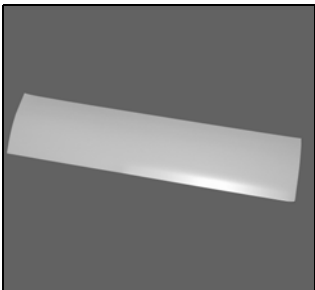

Back/Dust Cover
PCN 4150149000



Back Cover Bracket
PCN 4150256000