


Vignette® TDBU Standard Hardware

EasyRise™ Standard Parts

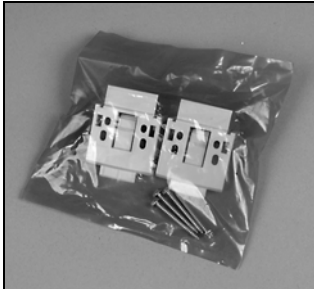


Installation Bracket with Shim
2-bracket package w/screws
PCN 3400240000 (Shown)
3-bracket package w/screws
PCN 3400250000



Kit, UCT Install, Inside-Outside
Bracket
PCN KIT2350




Vignette® Modern Roman
Shades
EasyRise™ Lifting Systems
Standard, Top-Down/Bottom-
Up, and Two-On-One Headrail
Installation Instructions
PCN 5105308000

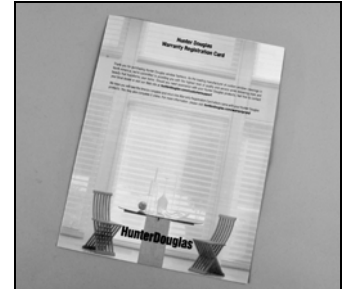


Hunter Douglas Warranty
Registration Card
PCN 7109933000


UltraGlide® Standard Parts

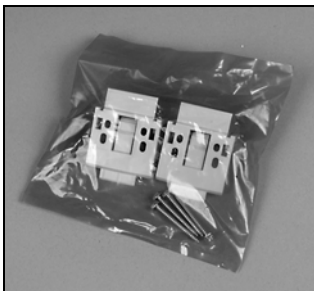

Installation Bracket with Shim
2-bracket package w/screws
PCN 3400240000
3-bracket package w/screws
PCN 3400250000

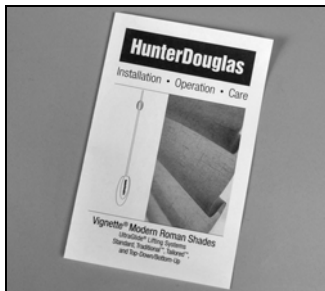

Vignette® Modern Roman
Shades
UltraGlide® Lifting Systems
Standard, Traditional™, Tailored™ and TDBU
Installation Instructions
PCN 5105309000

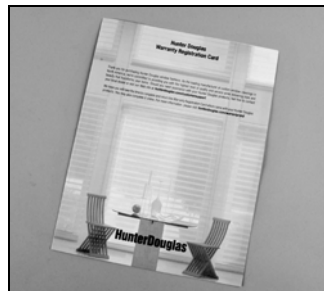

Hunter Douglas Warranty
Registration Card
PCN 7109933000