


# Standard Hardware

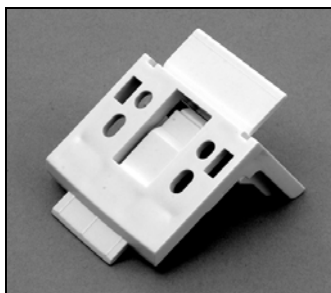


Installation Bracket with Shim  
2-bracket package w/screws  
PCN 3400240000  
3-bracket package w/screws  
PCN 3400250000




Kit UCT Install, Inside-Outside  
Bracket (**Required for shade  
Operation**)  
PCN KIT2350



Vignette® Modern Roman  
Shades  
EasyRise™ Lifting Systems  
Standard, Top-Down/Bottom-  
Up, and Two-On-One Headrail  
Installation Instructions  
PCN 5105308000

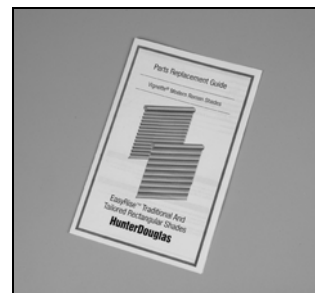


Vignette® Modern Roman  
Shades  
EasyRise™ Traditional &  
Tailored  
Parts Replacement Guide  
PCN 5106057000

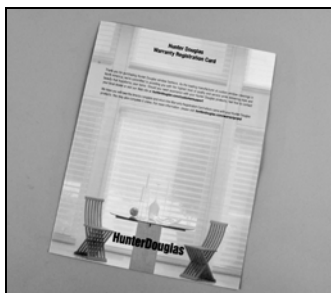


Hunter Douglas Warranty Regis-  
tration Card  
PCN 7109933000


# Optional Hardware

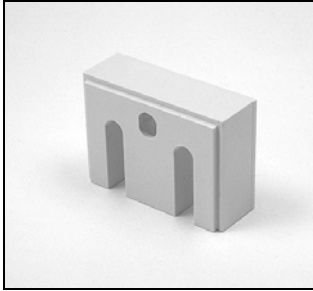

1/2" Spacer Block  
PCN 2930230000

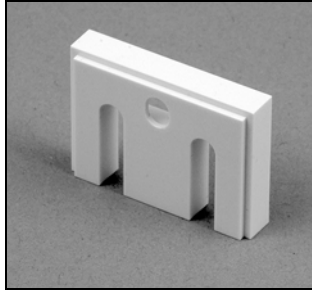

1/4" Spacer Block  
PCN 4150239000

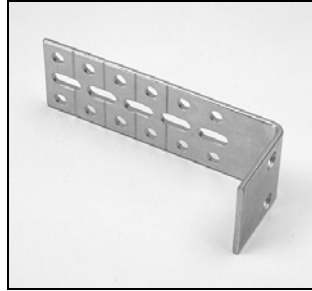

End Mount Extension Bracket  
PCN 2930340000



Magnetic Hold-Down Kit  
PCN KIT9108