




# Additional Hardware

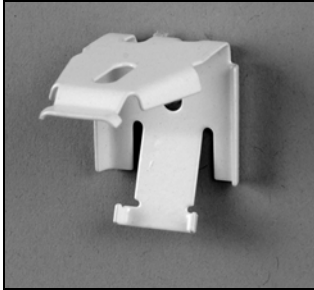


Installation Brackets  
2-Pack PCN KIT2507  
3-Pack PCN KIT2508

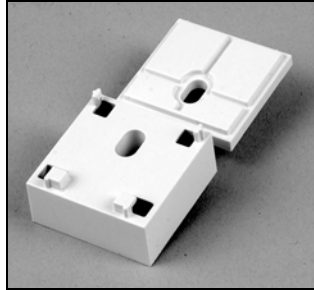


Spacer Blocks  
2-Pack PCN KIT2516  
3-Pack PCN KIT2517

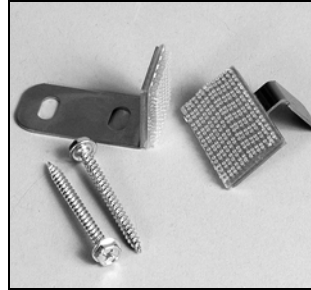


Vertical Rail Stabilization Kit.  
PCN 3400258000

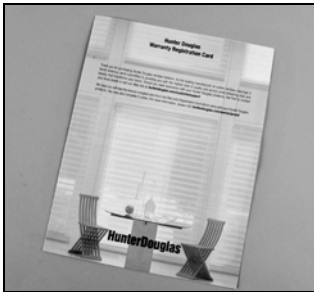

Hunter Douglas Warranty  
Registration Card  
PCN 7109933000

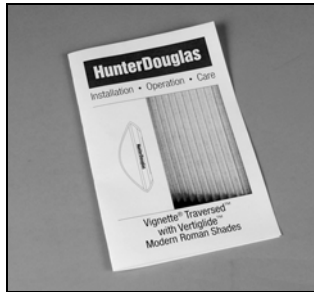

Vignette® Traversed™ with  
Vertiglide™ Modern Roman  
Shades Installation, Operation,  
and Care  
PCN 5105366000

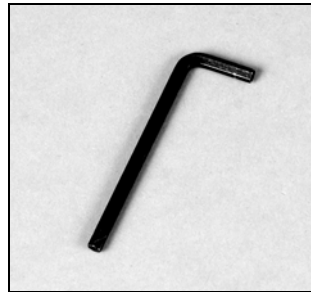

Allen Wrench, 3/32 X 2"  
PCN 3400332000